



SET UP


ARENA

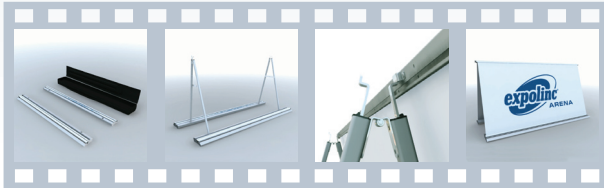

PORTABLE DISPLAYS

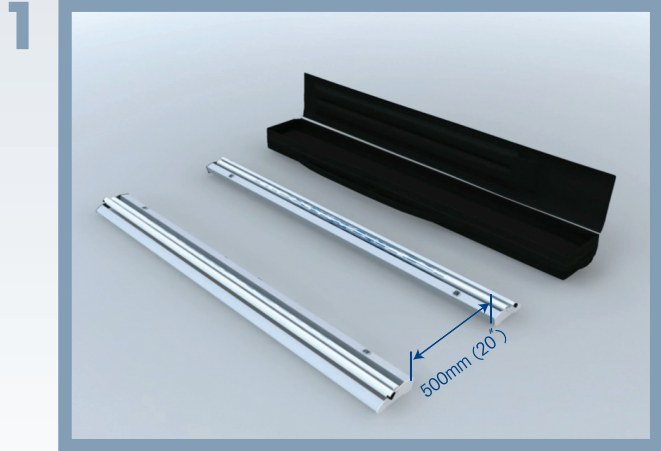


Take the two cassettes out of the bag and place them on a flat surface with a spacing of about 500 mm / 20 inches.

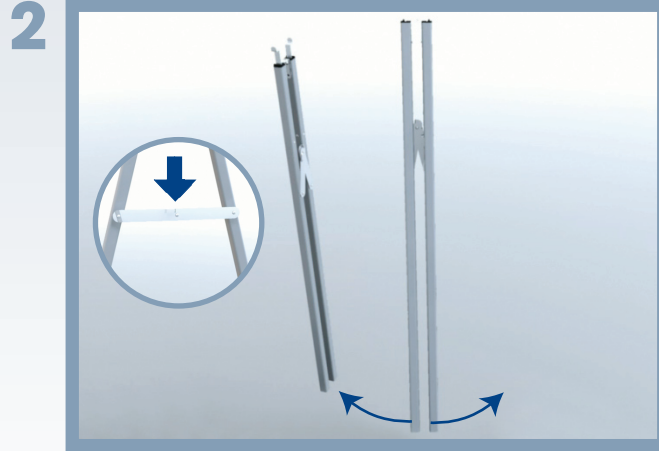


Fold out the two supporting legs.

Extend the legs to ensure that the supporting legs are locked into position.

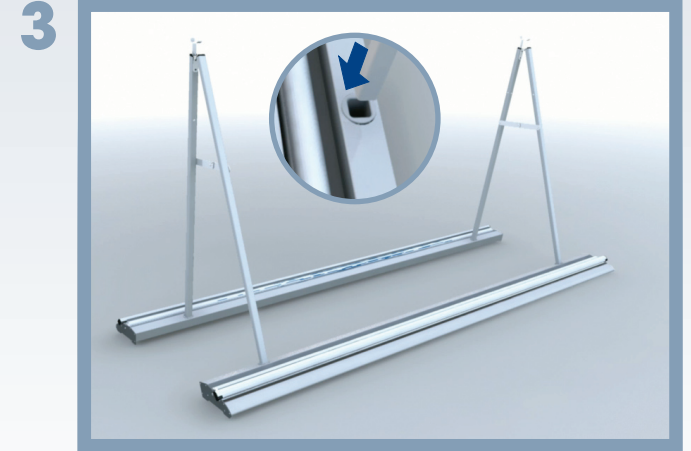

If necessary, adjust the distance between the cassettes.

Insert the supporting legs into the cups located on the cassettes.

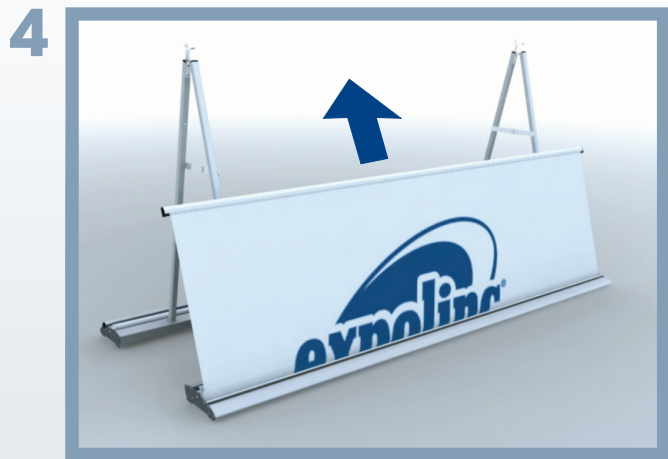

Take hold of top profile and pull up the graphic panel.



Attach the supporting legs to the brackets found at each end of the top profile.

Repeat steps 4 and 5 for the other side.



Verify that the system is level.

